




V2.0

In Out

Line Calls and Stats for Everyone

QUICK SETUP GUIDE OF THE LINE DEVICE

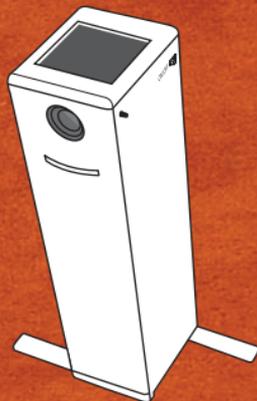


Visit the support website
for additional information:

<http://inout.tennis/support>

START-UP

1

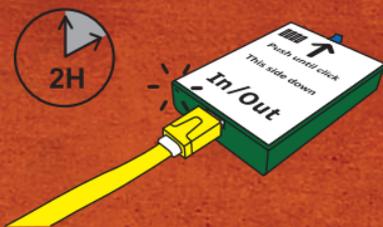


Charge the battery until the red light turns off.

IN/OUT TIP


- It takes two to three hours to completely charge the battery.
- the net and line devices use the same battery.
- Based on the In/Out chip, the line device has a 10+ hour battery life.
- It's safe to leave the battery inside the line device.

2

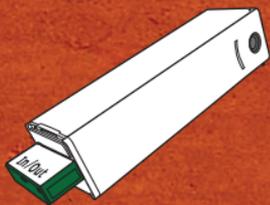

Insert the battery at the bottom of the device.

2

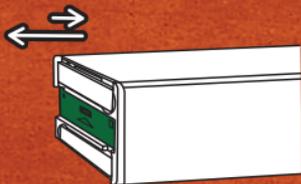


To remove the battery, push it inwards. The clip will eject it.

3



Slide the power button.


4

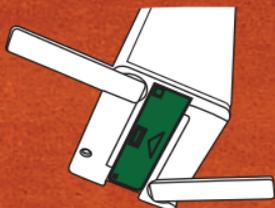

For better stability, rotate the pads below the device.

ON COURT

1

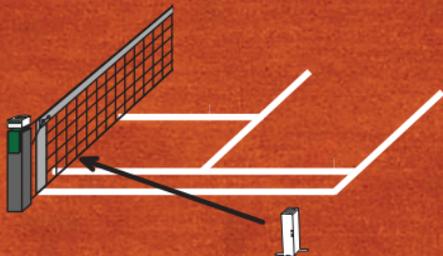


Press the button that points towards the net. The device needs to know on which side it is.

IN/OUT TIP

- The line devices automatically pair with the net devices.
- The line device uses two side buttons (no touchscreen).
- Try to face the devices away from the sun.
- For more stable image, device will calibrate one second after the button has been pressed.

2

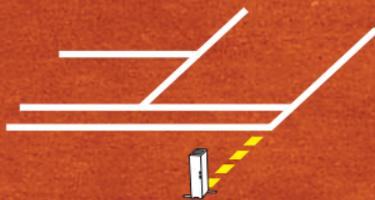

Center the line device with the court line. Then, press any button to calibrate.


3

Found! Linecall in 2s
Press button to retry



Once the line is found, line calling starts automatically.

4

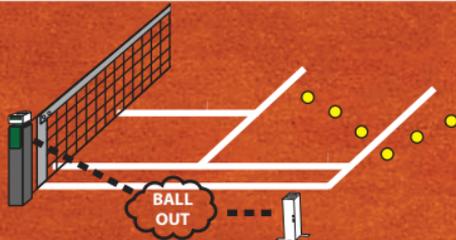

For close calls, data is sent over-the-air from the line device to the net device.


5



Net device confirms that the call was made by the line device.


FIRMWARE UPGRADE

1

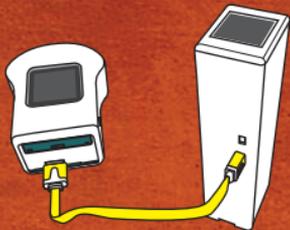

Connect the line device to a net device version 2.0.

2

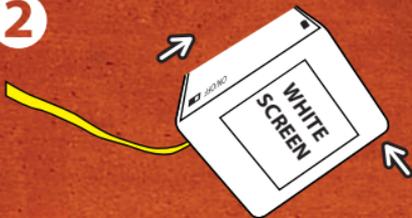

Turn on the line device while pressing the opposite button.

3



Do you want to flash the firmware to the line device which needs to be in upgrade mode with a white screen?

No

Yes

On the net device, go to Settings->Advanced->Line Device and follow the instructions.

IN/OUT TIP

- Make sure to put the line device in upgrade mode. You should get a white screen on the line device.
- The line device is upgraded with the same firmware date as the net device. Start screen of the line device shows the firmware date.



For the complete user guide, visit:
<http://inout.tennis/support>.

In case of any problem, contact us:
<http://inout.tennis/helpdesk>.



The warranty and return policies:
<http://inout.tennis/warranty>.

The privacy policy:
<http://inout.tennis/privacy>.



Li-ion

The rechargeable Lithium-Ion battery must be disposed of properly. Visit <http://call2recycle.org>.

In/Out has passed the CE and FC certifications. For more information: <http://inout.tennis>.

