 


QUICK SETUP GUIDE

Visit the support website for additional information:

http://inout.tennis/support

START-UP



IN/OUT TIP


- It takes two hours to charge the battery completely.
- The battery can be charged from a power outlet or with a standard power bank. In/Out can be operational and charging at the same time on the court if needed.



Insert the battery with the blue face up on top and white face down.




To remove the battery, push it inwards. The clip will eject it.

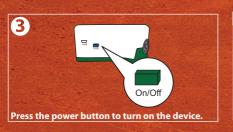

IN/OUT TIP

- To hard shutdown the device, press and hold the power button for three seconds.
- Upgrade of the device can be done over the air or from a microSD card. Visit: http://support.inout.tennis/ firmware-upgrade for more information.

ON COURT

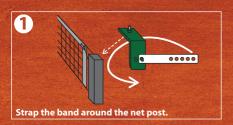

IN/OUT TIP

- In/Out uses cameras. For best results, place the device on the net post facing away from the sun.
- Make sure to be behind the the device during setup as the cameras have a very wide viewing angle.



feeling some resistance.



Start the device, press "Line Call".







SETTINGS



Press Settings. Chose Practice or match mode.

IN/OUT TIP

- In practice mode (free play), only the side and base lines are called.
- In match mode, the serve lines are called when the rally point starts.
- Train serve modes only call the serve lines.



Two devices are recommended for double mode.

IN/OUT TIP

- Once paired, two devices will automatically look for each other next time.
- Both devices communicate together in real-time to make the best call possible.



In/Out-Federer
This In/Out is not paired
One other In/Out around:
InOut-Radwanska



Pair a second device to get better accuracy.







Customize the sound and lights of calls.

IN/OUT TIP

- Use the customs signal mode to independently change the signal settings.
- The "Close Call" option is triggered only when the call is close to the line.



Respect other players if the signal disturbs them.

COMPANION APP & CLOUD

In/Out works in standalone mode without any other device.

The Companion App and the web interface provide additional features such as screen mirroring, video playback and stats analysis.



 


Go to Home->Settings->Advanced for the In/Out Wi-Fi network name and password.

IN/OUT TIP

- The Wi-Fi network name is derived from grand slams and ATP / WTA finals winners.
- Press the Wi-Fi logo and the device will toggle between the 2.4GHz and 5GHz bands.
- After associating Wi-Fi, go to <u>player.inout.tennis/about.html</u> and chose your favorite player as the network name.





Open the Companion App or point a browser to http://player.inout.tennis

OTHER INFORMATION



For the complete In/Out product and user guide, visit: http://inout.tennis/support.

In case of any problem, like your opponent keeps cheating on you, contact the heldesk: http://inout.tennis/helpdesk.





The warranty and return policy is available online: http://inout.tennis/warranty.

Read the privacy policy to know how we protect the secrets of your magic tennis: http://inout.tennis/privacy.





The rechargeable Lithium-lon battery must be disposed of properly. Contact your local town for disposal information or visit http://call2recycle.org.

The electronics module has passed the CE and FC certifications.

Visit http://inout.tennis for more information.



Version 2018-02-02

Refer a friend and get a free battery: https://inout.tennis/refer